


INSTRUCTIONS FOR YOUR Metal BackLoader Frame

HARDWARE



8 - TENSION CLIPS

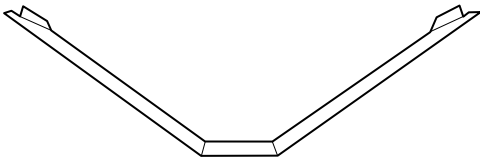


2 - HANGERS

Note: Don't let things get all scratchy! Place your frame face down on a smooth, flat surface when assembling.

1. With Frame face down, remove the protective film from both sides of your Acrylic. In the following order, insert Acrylic or Glass, Artwork & Backing.

2. Place a Tension Clip in each corner. With the Tension Clip sitting in a V shape, flatten Clip to secure the hooked portions of the Clip under the back of the Frame. The Tension Clips will hold the artwork firmly in place within your Frame.

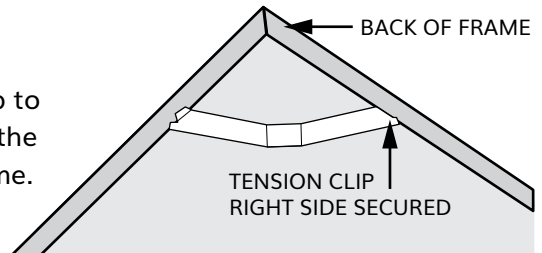

3. Position the Hanger at the top of the frame. Attach to frame by pressing open ends together and inserting between the Frame and Backing.
4. Hang your masterpiece from the Hangers and enjoy!

Note: For Frames 16x20 and up, use extra Tension Clips on the sides of the Frame and two Hangers to add stability.

